



# Instructions


## Anchor STAKE Yanker

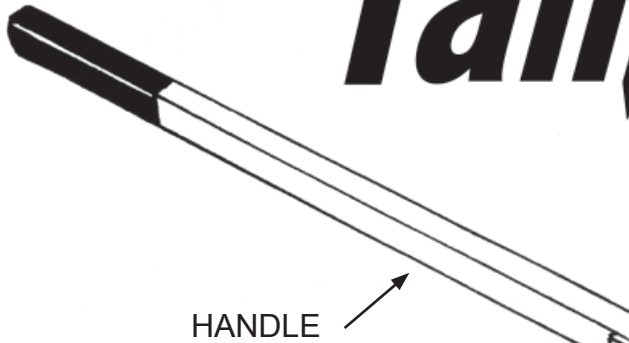

HANDLE

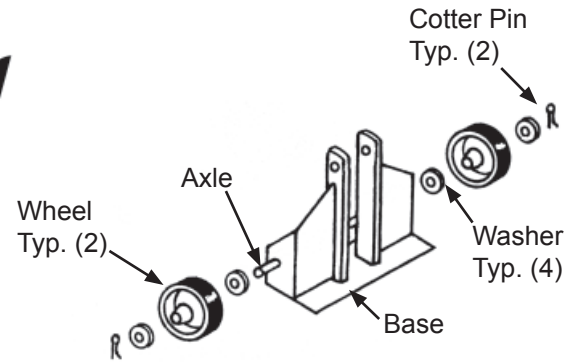

WHEEL ASSEMBLY

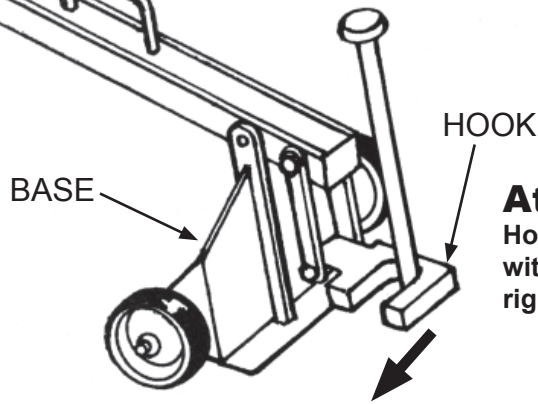

**Attention:**  
Hook must be assembled  
with jaw opening to the  
right (as shown).

### 1. Assembly

Pin the handle to hole in base as shown, with pin and hair spring cotter pin provided. Assemble wheels as shown. Hook must be assembled in base as shown. Make a careful examination to determine safety equipment needed. Proper safety equipment should be used at all times.

### 2. Pulling Tent Stakes

Position Stake Puller with base parallel to stake as shown above, keeping lever movement free of obstructions. Apply downward force to lever handle to pull stake. Repeat motions until stake is loose.

### Caution:

**Do Not:** Apply more than 300 lbs. of pressure to the end of the handle (300 lbs. at the end of this handle produces approximately 2,400 lbs. uplift at the stake).


**Do Not:** Use an extension to lengthen handle. Doing so will damage your puller.

**Do Not:** Position the puller on the side of the stake where the angle between the stake and the ground is 90° or less.

**Do:** Regularly inspect your puller for loose fasteners or worn parts. Replace as needed.

### 3. Difficult Stakes to Remove

In most instances one person is capable of generating an adequate amount of uplift to remove stake when the Yanker is used properly. In the event a stake cannot be removed with a single puller, a second puller may be used as shown to add additional uplift to the stake.

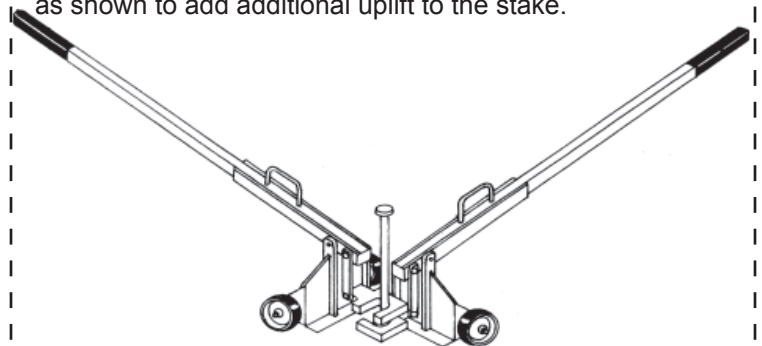

SALES OFFICES:  
1100 BURCH DRIVE  
PO BOX 3477  
EVANSVILLE, IN 47733 USA

PHONE: 812-867-2421  
FAX: 812-867-0547  
1-800-544-4445  
EMAIL: [tents@anchorinc.com](mailto:tents@anchorinc.com)  
[www.anchorinc.com](http://www.anchorinc.com)

PRODUCTION FACILITIES:  
BRADENTON, FL  
EVANSVILLE, IN



Thank you for purchasing an Anchor product. In return, we pledge Quality, Service and Craftsmanship and are available for any questions you may have or assistance you may need.

## **PHONE NUMBER**

812-867-2421

## **FAX NUMBER**

812-867-1429

Anchor products are of superior design and operate best within the parameters of these instructions. It is imperative that the instructions be carefully read and **COMPLETELY FOLLOWED**. Please read installation instructions before the installation or removal of this product. Installation instructions are available at [www.anchorinc.com](http://www.anchorinc.com).

### **Warning:**

Do not lengthen handle. The Anchor Stake Puller must only be used to remove tent stakes. Read and follow all instructions carefully. Use extreme caution in the vicinity of moving parts such as the joints, the fulcrum area and gripping plate. Improper use of this tool is likely to result in serious bodily injury or damage for which Anchor Industries shall not be responsible.

### **Disclaimer**

Anchor Industries disclaims and excludes all express or implied warranties of merchantability and fitness for a particular purpose. The product is sold "AS IS" and no warranty shall apply. The user shall determine the suitability of the product for the intended use and assumes all risk and liability. Anchor Industries shall not be liable in tort or in contract for any loss or damage, direct, incidental or consequential arising out of the use of or the inability to use the product.